

# Type UH Configuration P Flow Direction P



Part Number	Descrizione	Giacenza disponibile
9960808	UH 025-23-2T-P-3X06Y-P	3
9960822	UH 025-36-2M-P-0X06Y-P	2
9960815	UH 025-36-2T-P-3X06Y-P	8
9960823	UH 025-36-4M-P-0X06Y-P	1
9960819	UH 025-36-4T-P-3X06Y-P	10
1400054	UH 031-23-2M-P-0X06Y-P	4
1400051	UH 031-23-2T-P-3X06Y-P	1
9960845	UH 031-27-2M-P-0X06Y-P	2
9960844	UH 031-27-2T-P-3X06Y-P	10
1400103	UH 031-27-4T-P-3X06Y-P	3
9960848	UH 031-36-4M-P-0X06Y-P	5
9960846	UH 031-36-4T-P-3X06Y-P	5
9960852	UH 035-27-4M-P-0X06Y-P	5
9960851	UH 035-27-4T-P-3X06Y-P	3
9960862	UH 035-36-4M-P-0X06Y-P	5
9960856	UH 035-36-4T-P-3X06Y-P	21
9960860	UH 035-36-6T-P-3X06Y-P	2
9960877	UH 040-27-4T-P-3X06Y-P	5
9960892	UH 040-36-4M-P-0X06Y-P	6
9960886	UH 040-36-4T-P-3X06Y-P	12
9960891	UH 040-36-6T-P-3X06Y-P	5
9960903	UH 045-30-4M-P-0X06Y-P	5
9960901	UH 045-30-4T-P-3X06Y-P	5
9960907	UH 045-36-6T-P-3X06Y-P	4
9960921	UH 050-27-4M-P-0X06Y-P	1
9960915	UH 050-27-4T-P-3X06Y-P	14
9960919	UH 050-27-6T-P-3X06Y-P	2
9933008	UH 056-27-4M-P-0X06Y-P	1
9933007	UH 056-27-4T-P-3X06Y-P	10

1901689	UH 056-30-6T-H-3X06Y-P	1
1400082	UH 056-30-6T-P-3X06Y-P	5
1400086	UH 063-23-4T-P-3X06Y-P	4
9960948	UH 063-27-6T-P-3X06Y-P	4